



Blow Up Mattress

Product Details Dimensions/Size:

- Inflated dimensions: 185cm (L) x 22cm (H) x 76cm (W) (Approx.)
- **Maximum weight capacity:** 100kg
- **Material:** Polyvinyl chloride (PVC)
- **Product weight:** 1.73kg
- **Colour:** Navy
- **Features**Single bed
- Quiet and comfortable flocked sleeping surface
- Sturdy coil beam construction
- Quick release valve
- **Additional Information**Pump required
- **Care instructions:** Clean according to given instructions
- **Note:** The vinyl material will stretch during the first few uses and during periods of large temperature fluctuation. This can give the impression the mattress is deflating. Simply inflate with more air to keep the mattress taut and achieve maximum comfort.
- **Warning:** This item is not a flotation device, do not use in water.
- **Caution:** Keep away from open flames and heat source.

Inflation Methods:



Electric Pump



Manual Pump




Foot Pedal Pump



Ozito electric pump is provided. Download instructions under 'electric air pump' downloadables.

Use ONLY the middle nozzle.

Do not separate the other 2 nozzles from each other.

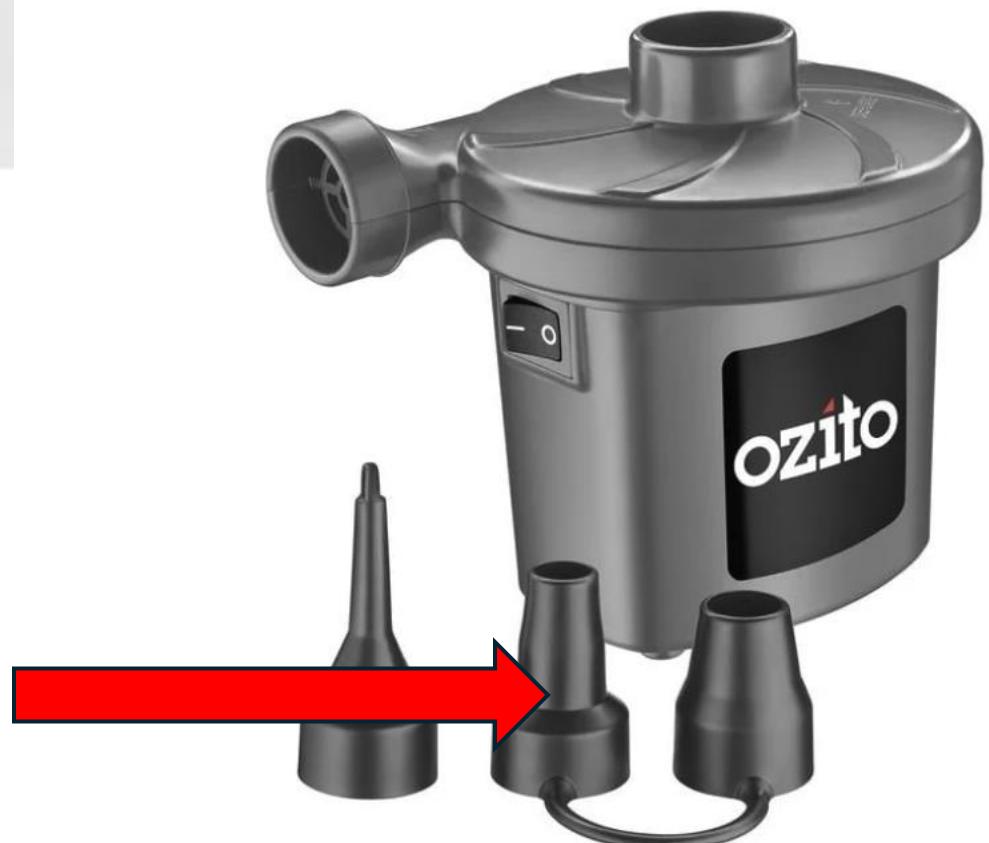

Inflation

Prepare the mattress:

Unroll the air mattress and place it on a clean, flat surface, checking for sharp objects that could puncture it.

Open the valve:

Open the protective cap on the valve to allow air to enter.

Connect the pump:


Attach your manual, electric, or vacuum pump to the valve.

Inflate: Turn on the pump and inflate the mattress to your desired level of firmness.

Secure the valve: Once inflated, remove the pump and securely close the valve cap to prevent air leakage.


Your mattress has 3 parts.

1. Upper cap
2. Middle valve with lip
3. Bleeder valve

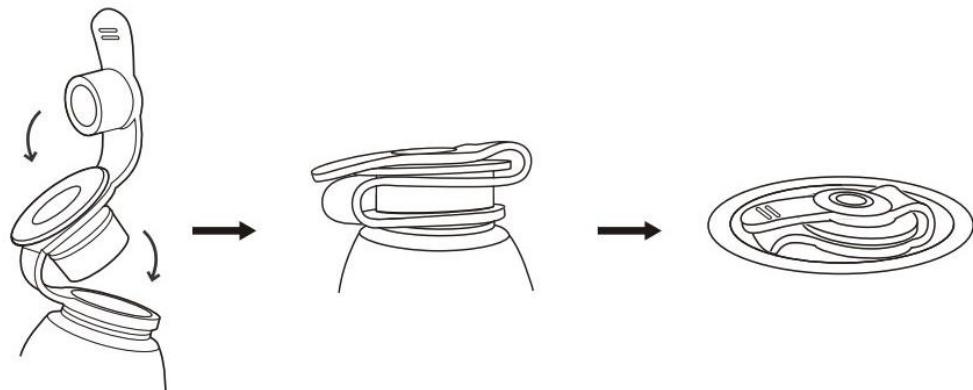


To inflate, lock middle valve in place



Step.2

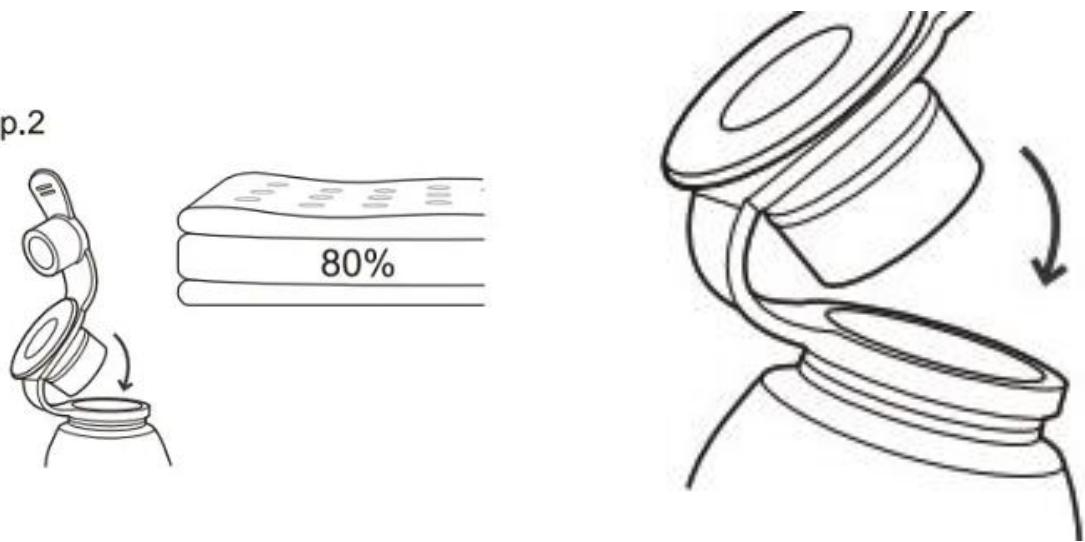

Once middle is in place, the air pump nozzle gently sits inside this- DO NOT FORCE IT IN, it only needs to go in gently and you start the air pump.

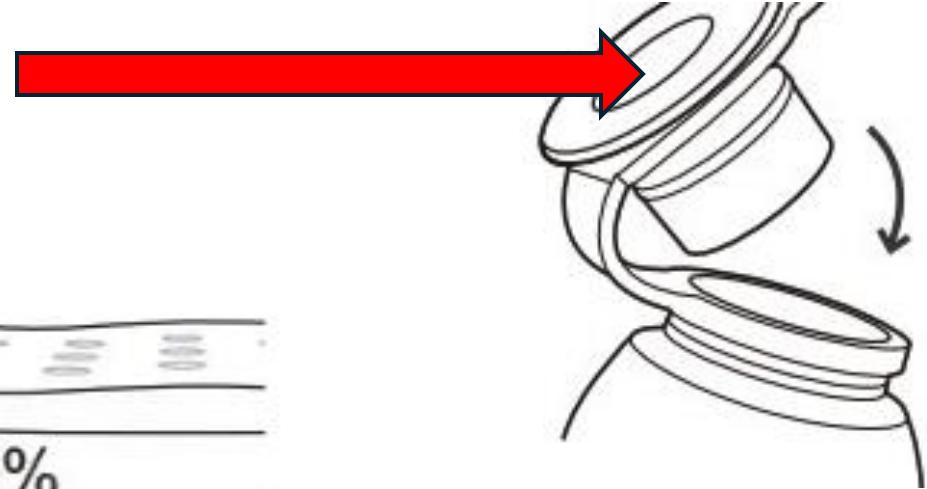


Step.3

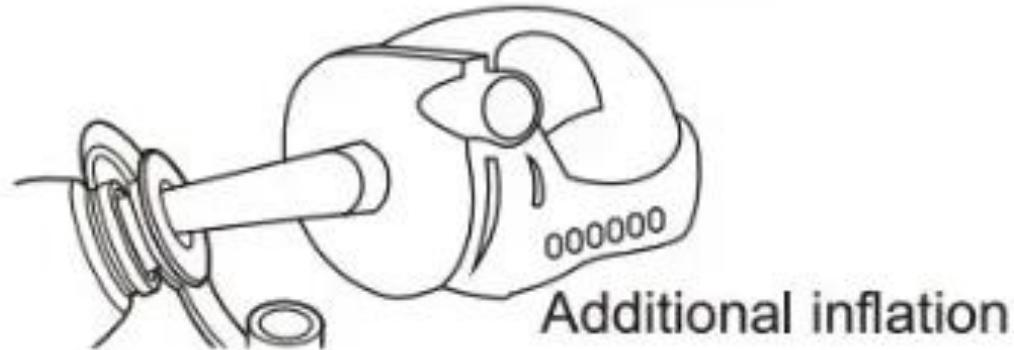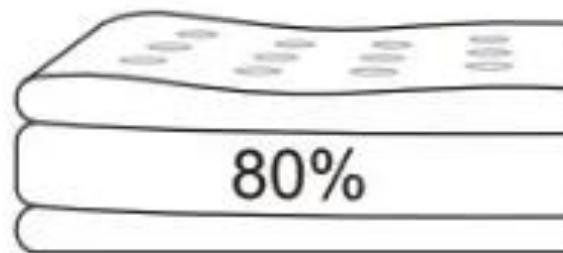

Step.4

Close Upper cap.



Be careful when pushing in as to not damage the external rim of the inflation point. It shouldn't have to be pressed really hard to keep air flow from escaping.

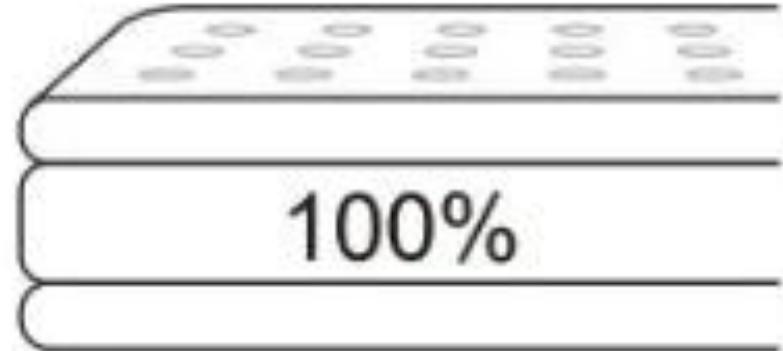

Tightly closed

Deflation

Step.2

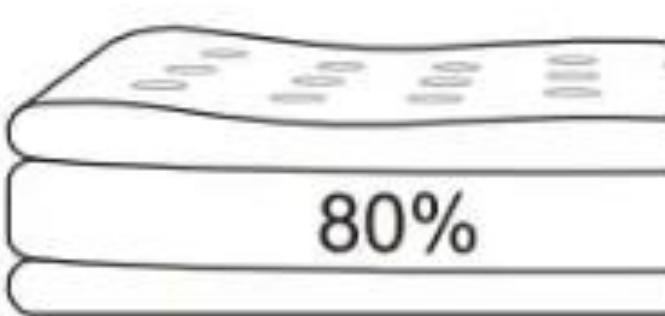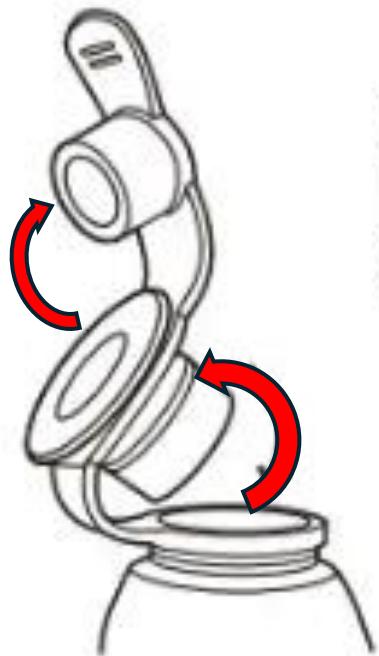


Open both nozzles.

Deflation after 3-4 minutes.

Roll mattress gently up.



May need top up after 2-3 hours

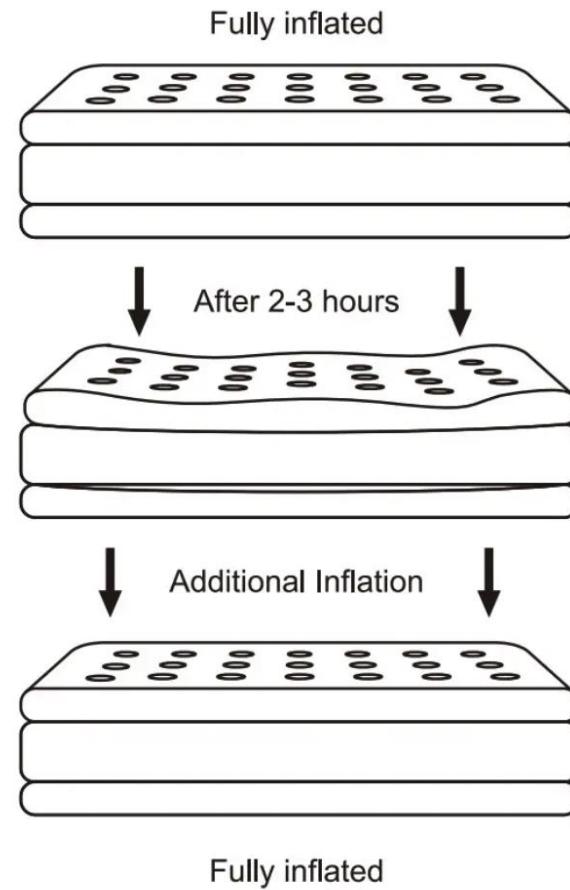

CARE AND MAINTENANCE

1. Inspect your bed before each use.
2. Keep your bed away from any sharp or protruding objects. Large cuts, tears, or snags may not be repairable and will not be covered by your warranty.
3. When not in use, put the bed in a clean, dry place out of extreme temperatures.

CLEANING

1. DO NOT SUBMERGE MATTRESS IN WATER!
2. For spot cleaning, use a clean damp cloth to wipe the surface of the mattress. Apply a clear liquid dish detergent without dye if necessary.
3. Wet stained area thoroughly gently rub the stained area with detergent. Blot the area to remove the staining substance.
4. Rinse thoroughly and pat dry. Allow your bed to air dry completely after cleaning and before storing.